


**Tools & Material Required**

Allen key - 12mm  
Adjustable Spanner

Key	Component	Qty
A	Thermostatic Cap	1
B	Thermostatic Body	1
C	Manual Body	1
D	Nut	2
E	Valve Tail (1/2" BSP)	1
F	Valve Tail (1/2" BSP)	1
G	Compression Fitting (15mm)	2
H	Balancing Cap	1

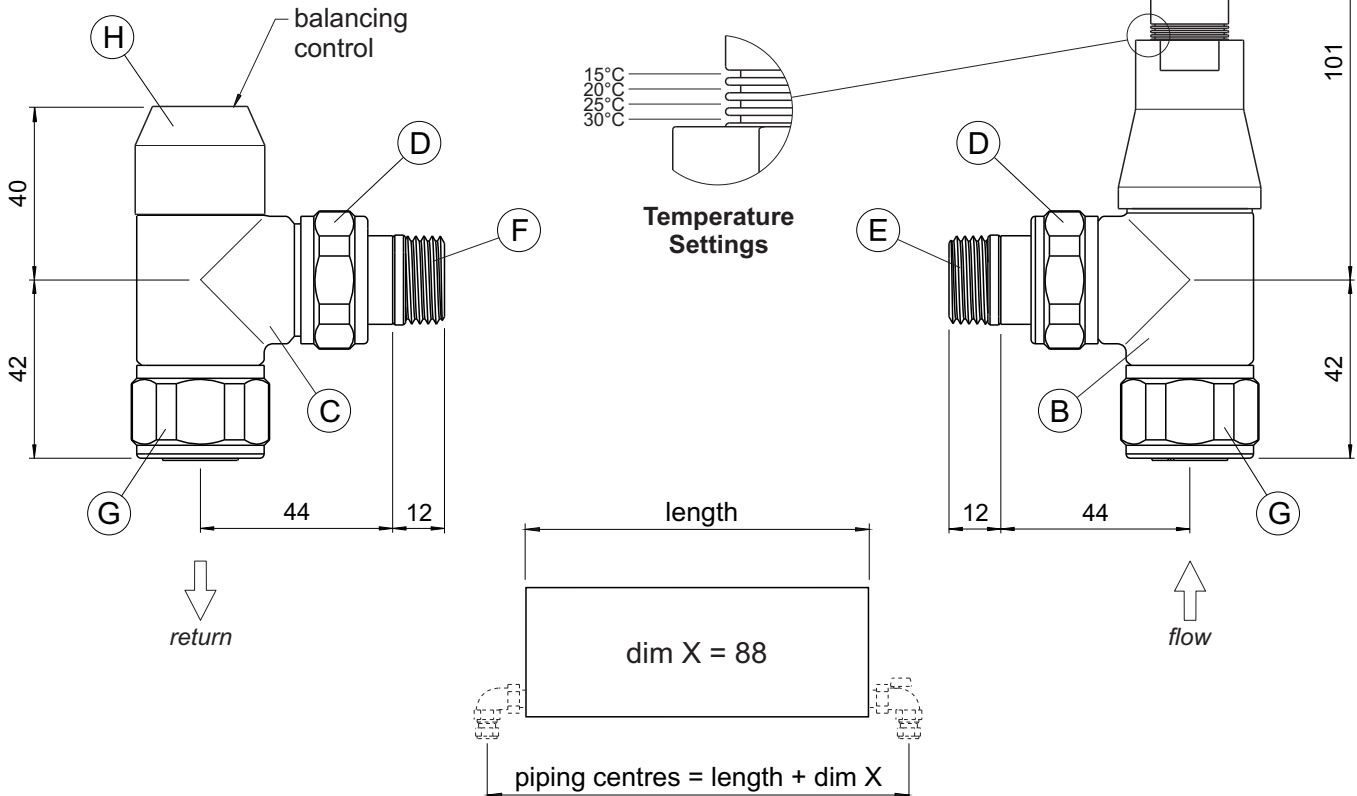

**Assembly Instructions**

Fit valve tail (E) to flow side of radiator using 12mm Allen key, ensuring nut (D) is in place.  
*Note: over-tightening of valve tails may cause damage to surface finish of radiator connections. Do not use grips.*

Fit valve tail (F) to return side of radiator using 12mm Allen key, ensuring nut (D) is in place.

Loosen compression fittings (G) and apply valve bodies (B) & (C) to 15mm pipe tails.

Install radiator onto bracket mountings and tighten valve tails (E) & (F) onto valve bodies (B) & (C) respectively.

Fully tighten compression fittings (G).

Rotate thermostatic cap (A) to desired temperature setting.

After filling and venting radiator, remove cap (H) and adjust balancing control to balance radiator.

**Please note: thermostatic valve must only be installed on the flow side of system.**

Further technical information regarding valves (sheet TDS3.1) can be found on our website at [www.bisque.co.uk](http://www.bisque.co.uk) or by calling and requesting a faxed or posted copy on **01276 605888**.