




Key	Component	Qty
A	Towel Bar Tube	1
B	End Cap	2
C	Self-adhesive Strip	2
D	Holder	2
E	Grub Screw	6
F	Allen Key	1

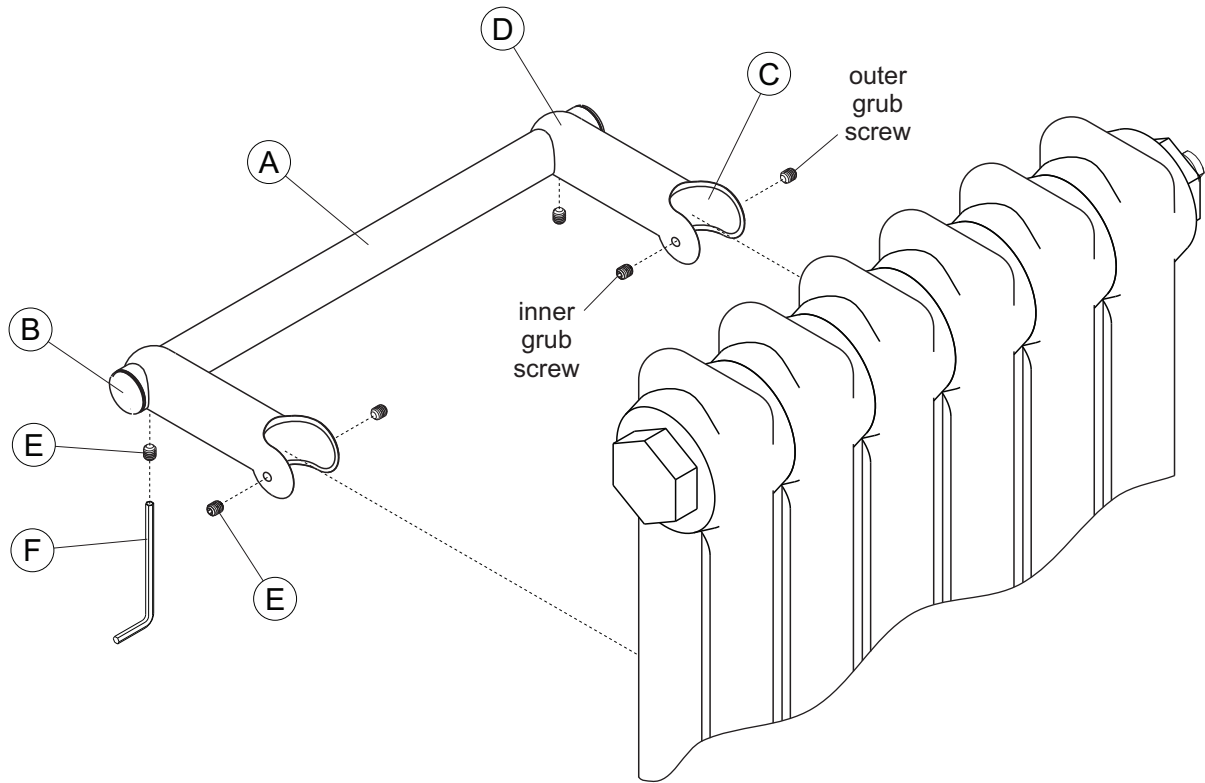


Possible Rail/Bracket Configurations
(Dependant on width of radiator)



both ends



single end



middle

Assembly Instructions

The holders that fit onto the radiator have two grub screws (inner and outer). Back off the grub screws until they are flush with the inside of the holder. Fit the adhesive backed felt to the inside of the holders.

Offer the first holder to the radiator in the desired position. (Make sure the towel bar locking grub screw is facing downwards.)

Using the allen key provided, gently tighten the outer grub screw until the holder is held loosely in position.

Offer the second holder to the other end of the radiator and gently tighten the outer grub screw until this is also loosely in position.

Offer the towel bar tube through each holder. This is the time to check the alignment of the holders and make sure that the towel bar tube is level.

When this is aligned, tighten the outer grub screw on each holder alternately until they are clamping each holder to the radiator.

Check once more that the towel bar tube is still level.

Tighten the inner grub screws. The holders will now be firmly in place.

Adjust the towel bar tube to the desired position relative to the holders and then gently tighten the two grub screws to lock this in position.

Fit the towel bar tube end caps to finish off